# LUNES 2.0 S











#### **FOLDING SHOWER DOOR**



#### **GLASS TYPE**





#### **PROFILE COLOURS**






White code A









Dimensions			Code	Glass			Profile						
Size	Actual size	Access	Do proje	or ction		1	2	11	78	A	В	K	J
	A	*	В	<b>B1</b>		Clear	Aqua	Niva	Lunes 2.0 print	White	Silver	Chrome	Matt Silver
-	60↔66	42	26	24	LUNS60-								
70	66↔72	48	29	27	LUNS66-	•							
76	72↔78	54	32	30	LUNS72-	•							
80	74↔80	56	33	31	LUNS74-	•							
80	78↔84	60	35	33	LUNS78-	•							
90	84↔90	66	38	36	LUNS84-	•							
-	90↔96	72	41	39	LUNS90-	•							
100	96↔102	78	44	42	LUNS96-	•							
H1	60‡200		SPE	CIAL	LUNSSP				-				









#### **SAFETY OPENING**

ATTENTION: THE BIFOLD DOOR IS DESIGNED TO BE OPENED INWARD. THE SAFETY OPENING FEATURE IS FOR EMERGENCY ACCESS.

• IN STOCK UK (Other products) Please check availability

#### **TECHNICAL DATA**

#### **PROFILE COLOURS**



White code A



Silver code B



Chrome SECO PVD CHROME code K



Matt silver code J

# GLASS TYPES 3,4,5,6 mm (European Standards UNI EN 14428)



Clear code 1



Niva code 11



Aqua code 2

#### **PRINTING**




Lunes 2.0 code 78

## **HANDLE**




Chromed or white plastic handle

#### **OVERALL DIMENSIONS FIXING PROFILES**

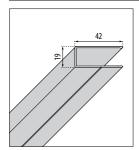


WALL R - 2A - 2P - 2PH A - AH - 3PH

Profile	Code
White	P01BJMOST-A
Silver	P01BJMOST-B
Chrome	P01BJMOST-K
Matt Silver	P01BJMOST-J

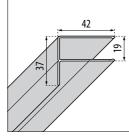


G+FL-3P-S-B-G

	Profile	Code			
	White	P01BJGBST-A			
	Silver	P01BJGBST-B			
	Chrome	P01BJGBST-K			
Mott Cilvor		DOID ICPOT. I			

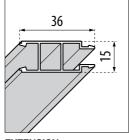


**EXTENSION** R - 2A - G+FL + 3P + 3PH - G -B-S-2P-2PH-A-AH

	Profile	Code			
	White	P05HAAST3-A			
	Silver	P05HAAST3-B			
	Chrome	P05HAAST3-K			
	Mott Cilver	DOEUAACTO I			

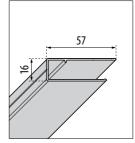

**EXTENSION** R - 2A - 2P - 2PH A - AH - 3PH

Profile	Code
White	P05BHST-A
Silver	P05BHST-B
Chrome	P05BHST-K
Matt Silver	P05BHST-J

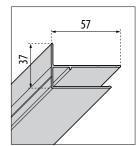

**EXTENSION** G+FL - 3P - S - B - G

Profile	Code			
White	P05BHCST-A			
Silver	P05BHCST-B			
Chrome	P05BHCST-K			
Matt Silver	PASRHCST-I			

### **HOW TO TAKE THE MEASUREMENTS**





Take the measurements from wall to the external edge of the shower tray. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.





Take the measurements from wall to wall at the bottom, at the top, in the middle and use the smallest. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.